


Position of Clamps Prior to Installation


Step 1

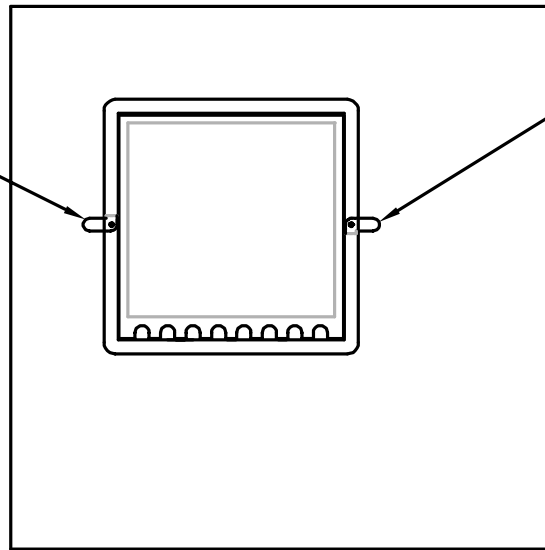

Mounting Clamp
2 Per Box

Position of Clamps After
Box is installed in Cutout

Step 2

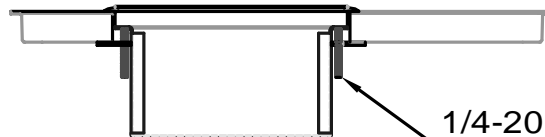

1/4-20 Flat Head Screw
2 Per Box

Step 3

Installation Instructions:

1. Rotate clamps so that they are parallel to box (Step 1)
2. Drop box into cutout and rotate ears so that they are perpendicular to box (Step 2)
3. Tighten clamps to underside of panel (Step 3)
4. No mounting holes or special tools are required